RENEWING YOUR POOL

STEP 1 : P3 Coat X

Cementitious Waterproof slurry
& crack filler

Application: 1mm per coat
(2 coats suggested, opposite directions)
Coverage: 1,5kg/mm/m² per coat

STEP 2 : CrystalSkim WR

Trowel on waterproofing mortar
for water retaining structures

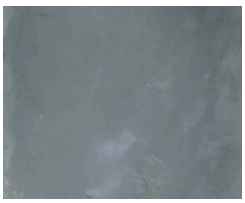
Application: 5mm to 20mm
Coverage: 2kg per mm/m²

CrystalSkim WR Colours :


Light Grey

Portland


Blast Furnace Grey


Charcoal


Natural

Instructions:

- Clean and pre-wet surface with water
- Mix **P3 Coat X** into a slurry coat and apply
- Allow first coat to dry (approx. 4 hours, depending on conditions)
- Apply the second coat **P3 Coat X** in the opposite direction
- While second coat **P3 Coat X** is still wet, apply **CrystalSkim WR** at a minimum of 3mm thick (maximum 10mm thick)
- Allow at least 7 days to cure before filling with water

